


Pylon Crestal Surgical Guide Drilling Protocol

Implant Ø5.0

Guide Sleeve Offset 11

*Use proper bone condenser regarding the height.

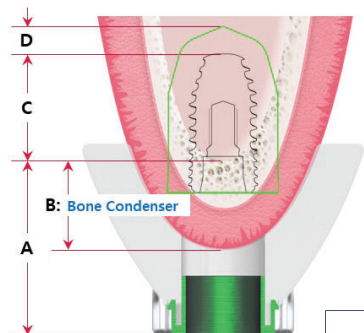

Tissue Punch
Top Drill

Ø2.0

16

Ø2.7/Ø3.2

16

Sinus Drill

Ø3.2

17

0.4 ~ 0.8cc

18

Bone Condenser

L 12

Final Drill

Ø3.9

18

Ø4.3

18

OFFSET
11

