


Pylon Crestal Surgical Guide Drilling Protocol

Implant Ø4.0

Guide Sleeve Offset 9.5

*Use proper bone condenser regarding the height.

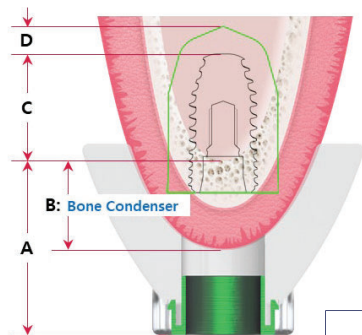

Ø2.0

Ø2.7/Ø3.2

Sinus Drill

Ø3.2

13

13

14

0.4 ~ 0.8cc

15

Bone Condenser

L9

13.5
~
13.9

OFFSET
9.5