


Pylon Crestal Surgical Guide Drilling Protocol

Implant Ø4.0

Guide Sleeve Offset 11

*Use proper bone condenser regarding the height.

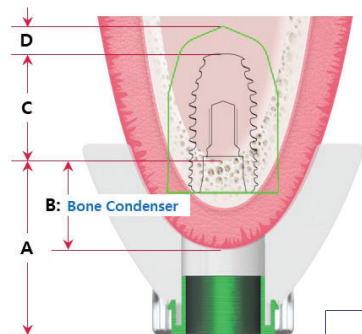

Tissue Punch
Top Drill

Ø2.0

15

Ø2.7/Ø3.2

15

Sinus Drill

Ø3.2

16

0.4 ~ 0.8cc

17

Bone Condenser

L9

15.5
~
15.9

OFFSET
11