


# Pylon Crestal Surgical Guide Drilling Protocol

Implant Ø4.0

Guide Sleeve Offset 9.5

\*Use proper bone condenser regarding the height.

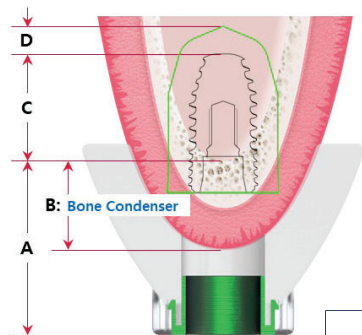

Tissue Punch  
Top Drill

| Sinus Drill |           |                         |
|-------------|-----------|-------------------------|
| Ø2.0        | Ø2.7/Ø3.2 | Ø3.2                    |
| 12          | 12        | 14    0.4 ~ 0.8cc    15 |

Bone Condenser

L9

