


Pylon Crestal Surgical Guide Drilling Protocol

Implant Ø4.0

Guide Sleeve Offset 11


*Use proper bone condenser regarding the height.

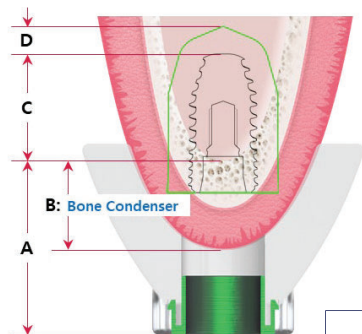

Sinus Drill					
Ø2.0	Ø2.7/Ø3.2	Ø3.2			
12	12	13	0.4 ~ 0.8cc	14	L6

Bone Condenser

L6



OFFSET
11

12.5
~
12.9

