


Pylon Crestal Surgical Guide Drilling Protocol

Implant Ø5.0

Guide Sleeve Offset 12.5

*Use proper bone condenser regarding the height.

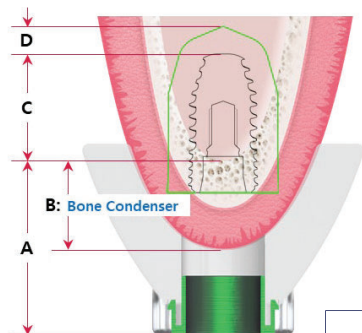

Tissue Punch
Top Drill

Ø2.0		Ø2.7/Ø3.2		Sinus Drill Ø3.2		Bone Condenser		Final Drill	
16		16		17	0.4 ~ 0.8cc	18	L 9	18	18

Bone Condenser

