


Pylon Crestal Surgical Guide Drilling Protocol

Implant Ø4.5

Guide Sleeve Offset 11

*Use proper bone condenser regarding the height.

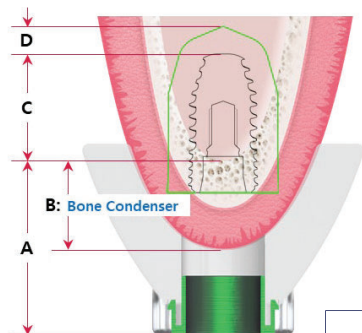

Tissue Punch
Top Drill

Ø2.0		Ø2.7/Ø3.2		Ø3.2		Sinus Drill		Final Drill	
						Ø3.2		Ø3.9	Ø4.3
16		16		17		195		186	186
						0.4 ~ 0.8cc			

Bone Condenser

L 12

OFFSET
11

