


Pylon Crestal Surgical Guide Drilling Protocol

Implant Ø4.5

Guide Sleeve Offset 12.5

*Use proper bone condenser regarding the height.

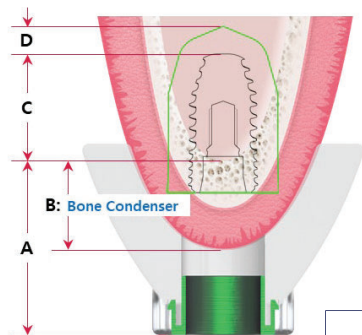

Ø2.0

Ø2.7/Ø3.2

Sinus Drill

Ø3.2

Final Drill

Ø3.9

Tissue Punch
Top Drill

13

13

15

0.4 ~ 0.8cc

16

Bone Condenser

L9

155

OFFSET
12.5

14.0
~
14.4