


Pylon Crestal Surgical Guide Drilling Protocol

Implant Ø5.0

Guide Sleeve Offset 9.5

*Use proper bone condenser regarding the height.

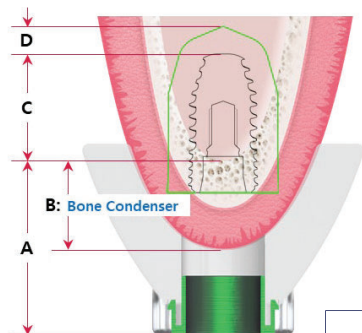

Tissue Punch
Top Drill

Ø2.0		Ø2.7/Ø3.2		Ø3.2	Sinus Drill			Final Drill		
					Ø3.2			Ø3.9	Ø4.3	Ø4.8
12	16	12	16	17	18	0.4 ~ 0.8cc	195	18	18	172

Bone Condenser

L 12

OFFSET
9.5

