


Pylon Crestal Surgical Guide Drilling Protocol

Implant Ø4.0

Guide Sleeve Offset 9.5

*Use proper bone condenser regarding the height.

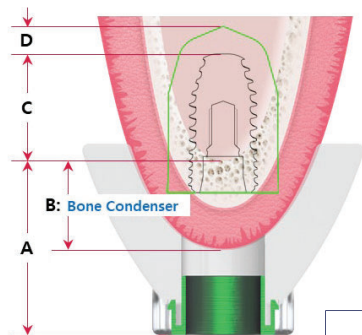

Sinus Drill

Ø2.0

Ø2.7/Ø3.2

Ø3.2

14

14

16

0.4 ~ 0.8cc

17

Bone Condenser

L 12

Tissue Punch
Top Drill

15.0
~
15.4

OFFSET
9.5