


Pylon Crestal Surgical Guide Drilling Protocol

Implant Ø4.0

Guide Sleeve Offset 12.5

*Use proper bone condenser regarding the height.

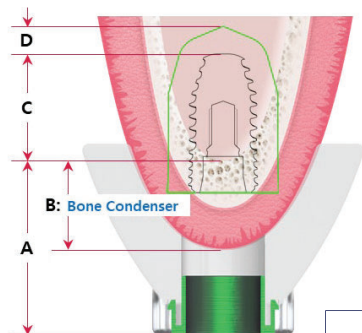

Tissue Punch
Top Drill

Ø2.0

13

Ø2.7/Ø3.2

13

Sinus Drill

Ø3.2


15

0.4 ~ 0.8cc

16

Bone Condenser

L9



14.0
~
14.4

OFFSET
12.5