


# Pylon Crestal Surgical Guide Drilling Protocol

Implant Ø4.0

Guide Sleeve Offset 12.5

\*Use proper bone condenser regarding the height.

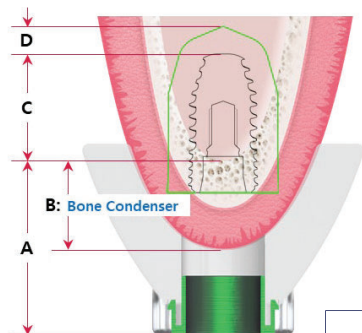

Tissue Punch  
Top Drill

| Ø2.0 |  | Ø2.7/Ø3.2 |  | Ø3.2 |  | Sinus Drill |             | Final Drill |  |
|------|--|-----------|--|------|--|-------------|-------------|-------------|--|
| 16   |  | 16        |  | 17   |  | 195         | 0.4 ~ 0.8cc | 186         |  |

Bone Condenser

L 12

OFFSET  
12.5

