


Pylon Crestal Surgical Guide Drilling Protocol

Implant Ø5.0

Guide Sleeve Offset 12.5

*Use proper bone condenser regarding the height.

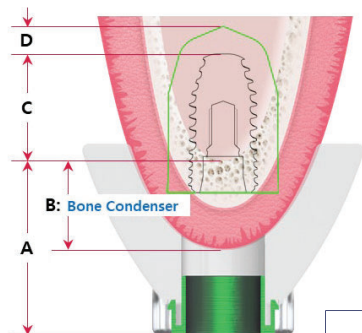

Tissue Punch
Top Drill

Ø2.0		Ø2.7/Ø3.2		Sinus Drill Ø3.2		Bone Condenser		Final Drill	
14		14		16	0.4 ~ 0.8cc	17	L9	155	155

Bone Condenser

L9

155

155

OFFSET
12.5