


Pylon Crestal Surgical Guide Drilling Protocol

Implant Ø4.5

Guide Sleeve Offset 9.5

*Use proper bone condenser regarding the height.

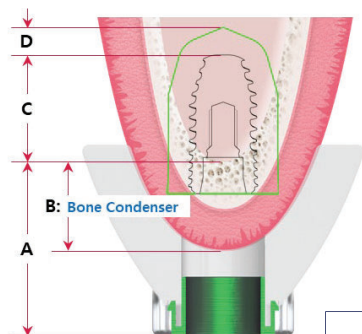

Tissue Punch
Top Drill

Ø2.0		Ø2.7/Ø3.2		Ø3.2	Sinus Drill Ø3.2		Final Drill Ø3.9 Ø4.3	
12	16	12	16	17	195	0.4 ~ 0.8cc	L 12 186	186

Bone Condenser

L 12

