


Pylon Crestal Surgical Guide Drilling Protocol

Implant Ø5.0

Guide Sleeve Offset 12.5

*Use proper bone condenser regarding the height.

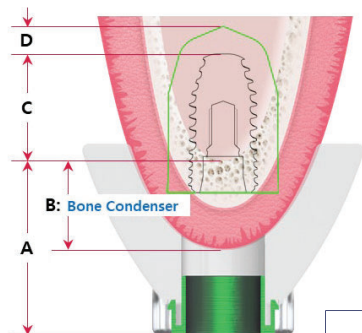

Ø2.0		Ø2.7/Ø3.2		Sinus Drill			Final Drill	
				Ø3.2			Ø3.9	Ø4.3
15		15		17	0.4 ~ 0.8cc	18	18	18

Tissue Punch
Top Drill

Bone Condenser

L9

OFFSET
12.5

