


Pylon Crestal Surgical Guide Drilling Protocol

Implant Ø5.0

Guide Sleeve Offset 12.5

*Use proper bone condenser regarding the height.

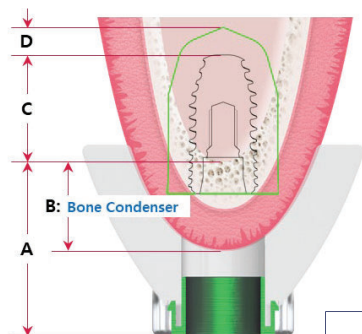

Tissue Punch
Top Drill

Sinus Drill					
Ø2.0	Ø2.7/Ø3.2	Ø3.2	Ø3.2		
16	16	17	18	0.4 ~ 0.8cc	195

Bone Condenser

L9

Final Drill		
Ø3.9	Ø4.3	Ø4.8
18	18	172

OFFSET
12.5

