


Pylon Crestal Surgical Guide Drilling Protocol

Implant Ø5.0

Guide Sleeve Offset 9.5

*Use proper bone condenser regarding the height.

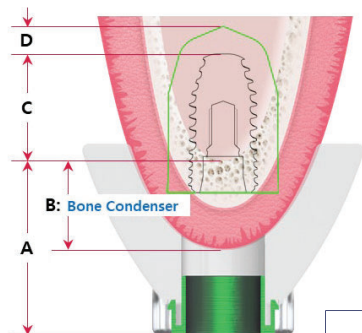

Ø2.0

Ø2.7/Ø3.2

Sinus Drill

Ø3.2

Final Drill

Ø3.9

Ø4.3

Tissue Punch
Top Drill

13

13

15

0.4 ~ 0.8cc

16

Bone Condenser

L9

155

155

OFFSET
9.5

14.0
~
14.4