


Pylon Crestal Surgical Guide Drilling Protocol

Implant Ø5.0

Guide Sleeve Offset 12.5

*Use proper bone condenser regarding the height.

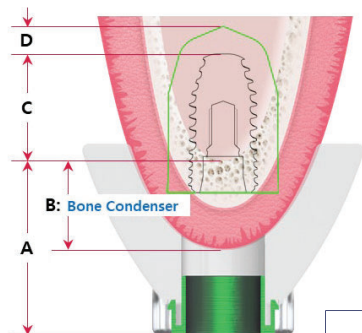

Tissue Punch
Top Drill

Ø2.0

12

Ø2.7/Ø3.2

12

Sinus Drill

Ø3.2

14

0.4 ~ 0.8cc

15

Bone Condenser

L6

Final Drill

Ø3.9

155

Ø4.3

155

13.0
~
13.4

OFFSET
12.5