Pylon Crestal Surgical Guide Drilling Protocol

Implant Ø4.0

Guide Sleeve Offset 9.5

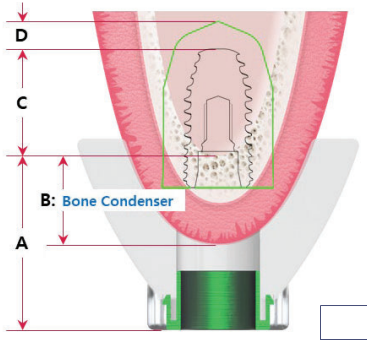

*Use proper bone condenser regarding the height.

	Ø2.0	Ø2.7/Ø3.2	Sinus Drill Ø3.2			Bone Condenser	
Tissue Punch / Top Drill	14	14	15	0.4 ~ 0.8cc	16		L 12

Copyright © 2022, URIS Inc
17666 Fitch, Irvine, CA 92614 | T: 714. 956. 1488 | F: 714. 956. 1491 | truabutment.com | urisimplants.com | info@truabutment.com | info@urisimplants.com