Pylon Crestal Surgical Guide Drilling Protocol

URIS

Implant Ø4.5

Guide Sleeve Offset 12.5

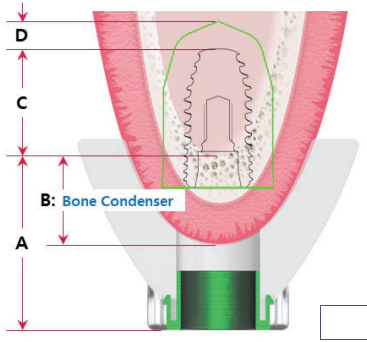

*Use proper bone condenser regarding the height.

			Sinus Drill						Final Drill	
		Ø2.0	Ø2.7/Ø3.2	Ø3.2	Ø3.2				Ø3.9	Ø4.3
Tissue Punch	Top Drill	16	16	17	18	0.4 ~ 0.8cc	19.5	L 9	18	18

Bone Condenser

Copyright © 2022, URIS Inc

17666 Fitch, Irvine, CA 92614 | T: 714. 956. 1488 | F: 714. 956. 1491 | truabutment.com | urisimplants.com | info@truabutment.com | info@urisimplants.com